



TECHNICAL BULLETIN METAL HALIDE

EYE Multi Metal MP400/BU/PS/ED37

ANSI Code: M155/O


Product Code: 54374

Features:


- High Output, Position Oriented Metal Halide
- High initial and maintained lumens
- Superior lamp to lamp color consistency

PERFORMANCE DATA

Initial lumens at rated watts after 100 hours operation	41000	lm
Mean lumens at 10 hours/start	33000	lm
Rated average life at 120hrs/start	NA	h
Rated average life at 10hrs/start	20000	h
Warm up time, typical	2 -3	min
Correlated color temperature	4000	K
CIE chromaticity	0.385, 0.390	X, Y
Color rendering index (Ra)	68	
Operating Position	Base Up	
Time to hot re-start, typical	5-8	min

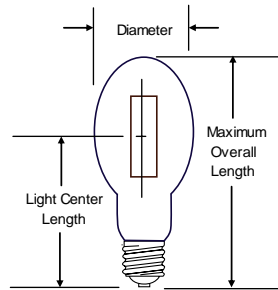

SPECTRAL DISTRIBUTION

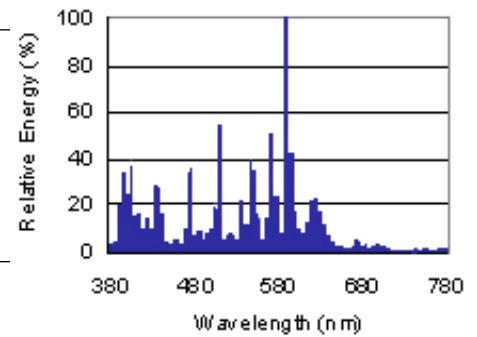


ELECTRICAL CHARACTERISTICS

Nominal lamp wattage	400	W
Nominal lamp voltage	135	V
Nominal lamp current	3.2	A _{rms}
Maximum current crest factor		-
Maximum starting current		A _{rms}
Minimum starting current		A _{rms}
Ballast requirements	Use with ballast rated for ANSI M135/M155/O lamp	
Open circuit voltage -30°C (-22°F)		V _{rms} V _{peak}
Pulse requirements	Ignitor	
Minimum pulse height		kV
Maximum pulse height		kV
Minimum pulse width	1 @ 2.7	us@kV
Minimum pulse repetition rate	1	Per half cycle
Pulse position(s)	90	°(cycle)


PHYSICAL DESCRIPTION

Maximum overall length	292 (11.5)	mm (in)
Light center length	178 (7.0)	mm (in)
Bulb diameter	117 (4.62)	mm (in)
Max. base - bulb eccentricity		Degrees
Maximum base temperature	210 (410)	°C (°F)
Maximum bulb temperature	400 (752)	°C (°F)
Bulb designation	ED37	
Bulb material	Lead-free Borosilicate (Hard Glass)	
Arc tube material	Quartz	
Effective arc length	NA	mm (in)
Bulb finish	Clear	
Base designation	EX39 Mogul	
Base finish	Nickel plated	

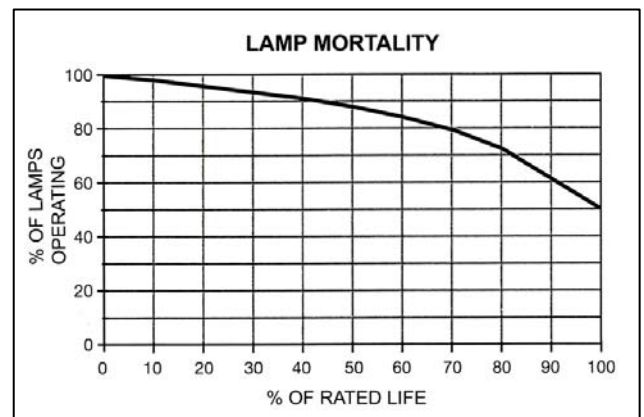

FIXTURE REQUIREMENT

O Rated – Open Luminaire Operating position base up..

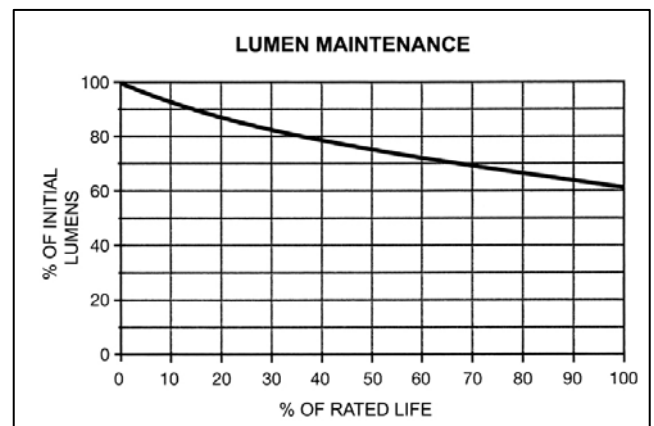

ISO 9001:2008 Certified ISO 14001:2004 Certified

OSHAS 18001:2007 Certified ISO 17025:2005 Accredited



**EYE LIGHTING INTERNATIONAL
OF NORTH AMERICA, INC.**

A SUBSIDIARY OF IWASAKI ELECTRIC CO., LTD.

Address: 9150 Hendricks Rd., Mentor, OH 44060

Phone: 888-665-2677 Fax: 800-811-7395 E-Mail: sales@eyelighting.com

Phone: (440) 350-7000 Fax: (440) 350-7001 Web: www.eyelighting.com



⚠WARNING

This lamp can cause serious skin burn and eye inflammation from short-wave ultraviolet radiation if outer envelope of the lamp is broken or punctured. Do not use where people will remain for more than a few minutes unless adequate shielding or other safety precautions are used. Lamps that will automatically extinguish when the outer envelope is broken or punctured are commercially available.

RISK OF ELECTRIC SHOCK

- Turn power off before inspection, installation or removal
- Protect lamp from direct contact with liquids to avoid breakage from thermal shock

RISK OF FIRE

- Keep combustible materials away from lamp during operation

UNEXPECTED LAMP RUPTURE MAY CAUSE INJURY, FIRE, OR PROPERTY DAMAGE

- Do not exceed rated ballast voltage
- Do not use lamp if outer glass is scratched or broken.
- Do not use beyond rated life
- Do not turn on lamp until fully installed
- Use only with a fixture and ballast rated for this product
- Turn lamp off at least once a week for 15 minutes
- Electrically insulate any metal to glass support in fixture

⚠CAUTION

RISK OF BURN

- Allow lamp to cool before handling.

LAMP MAY SHATTER AND CAUSE INJURY

- Do not use excessive force when installing lamp
- Dispose of lamp in a closed container

LAMP OPERATING INSTRUCTIONS

This is a discharge lamp and requires some time to restart and come up to full brightness after a power interruption. If power supply dips or is interrupted, lamps may extinguish and not restart. **Turn off power supply for 10-15 minutes and allow lamp to fully cool. Lamp will restart when power is restored.**

R	Conforms to: USA: 21CFR1040.30
----------	-----------------------------------

Hg-LAMP CONTAINS MERCURY

Manage in Accord with Disposal Laws

See: www.lamprecycle.org or 1-888-665-2677

ISO 9001:2008 Certified

ISO 14001:2004 Certified

OSHAS 18001:2007 Certified

ISO 17025:2005 Accredited



EYE LIGHTING INTERNATIONAL
OF NORTH AMERICA, INC.

A SUBSIDIARY OF IWASAKI ELECTRIC CO., LTD.

Address: 9150 Hendricks Rd., Mentor, OH 44060

Phone: 888-665-2677 Fax: 800-811-7395 E-Mail: sales@eyelighting.com

Phone: (440) 350-7000 Fax: (440) 350-7001 Web: www.eyelighting.com